




Using Your Interwrite Mobi Dock™

The **Interwrite Mobi Dock** allows for storing and charging of three **Interwrite Mobis™** or **Interwrite Mobi Learners™** at the same time. This Quick Reference Guide addresses the following tasks:

- Inserting the Interwrite Mobi into the Interwrite Mobi Dock
- Removing the Interwrite Mobi from the Interwrite Mobi Dock
- Checking Charging Status
- Connecting the Charging Source
- Mounting the Interwrite Mobi Dock to the Wall
- Connecting Two Interwrite Mobi Docks to Charge Simultaneously
- Locking the Interwrite Mobi Dock

Inserting the Interwrite Mobi into the Interwrite Mobi Dock

1. Push the **Release Pad** into the *locked* position.

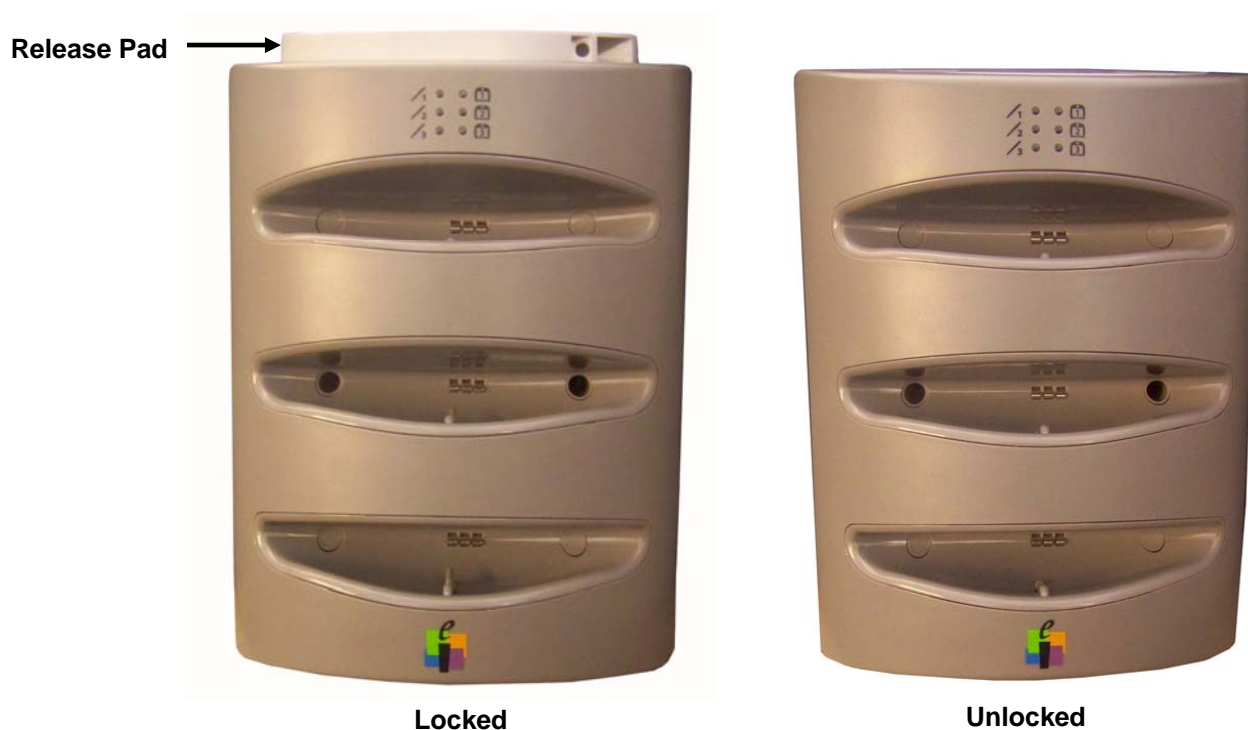

2. Make sure the **Mobi you plan on charging is turned off** before inserting it into the Mobi Dock.






3. Line up the **slot** located on the back of the Mobi to the **latch** on the Mobi Dock.



4. Push the Mobi into the Dock until you hear a **snap**.
5. Push the *Release Pad* back into the *Unlocked* Position.

Locking the Interwrite Mobi Dock

1. Make sure the Release Pad is in the **locked position**.
2. Locate the **hole for the lock** on the right side of the Release Pad.

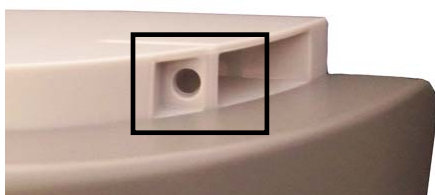

3. Insert the lock into the hole and secure the lock.

Removing the Interwrite Mobi from the Interwrite Mobi Dock


1. Push **down** on Release Pad until it is **flush with the Mobi Dock** in the *unlocked* position.
2. Take hold of the Mobi and pull it out of the Docking Station.
3. Press Release Pad again into the Locked Position after all the Mobis are removed so it will be ready for storage and recharging.





Checking Charging Status


Use the following table to indicate what the lights mean.

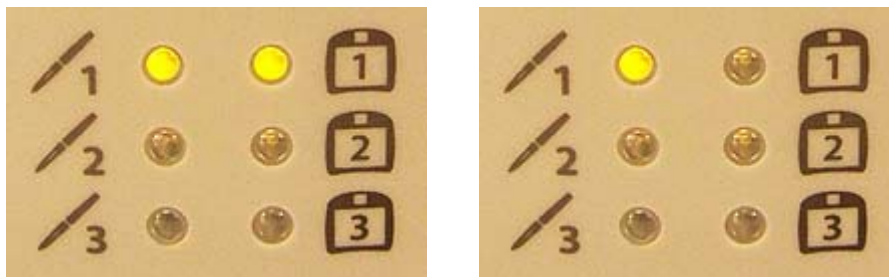

| Light | Status |
|--------------------------------------|---|
| All Lights Flash On | Mobi Dock has been plugged into an power outlet |
| Both Lights are solid | Mobi and Interactive Pen are charging |
| Mobi Light is Off Pen Light is On | Mobi is finished charging Note: the pen light will always remain lit. The light will be off if the pen is not in the Mobi or Mobi Learner. |
| Lights flashing | The Mobi or Mobi Learner was inserted into the Mobi Dock while still on. Turn off the Mobi and reinsert the Mobi. |

Connecting the Charging Source

1. Turn the unit over and locate one of the two Power Jack Outlets. Select the one that will best suit your needs after hanging the unit or placing it on the desk.

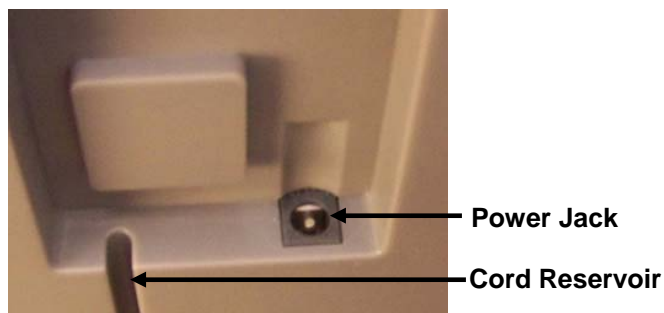

2. Insert the Adapter into the Power Jack and thread the cord through the Cord Reservoir so it stays flush with the back of the unit.





Mounting the Interwrite Mobi Dock to the Wall

You have two options for mounting the Mobi Dock.

- Using the keyhole **mounting holes** on the back of the Mobi Dock.
- Using the **mounting holes through the front** of the Mobi Dock. This option allows for permanent attachment to the wall.

Note: Use the appropriate mounting nuts, bolts, and screws for your wall options. Due to the multitude of mounting options, eInstruction does not supply mounting screws for the Mobi Dock.





Using the Keyhole Mounting Holes to Mount the Mobi Dock

1. Locate a secure mounting area, such as a stud and measure for the three keyhole openings.
2. Install the appropriate screws for your wall, leaving 1/8th of an inch between the head of the screw and the wall.
3. Slide the unit over the screws and allow it to move into place, securing the unit to the wall.
4. Slide the unit up and out to remove it.

Using the Permanent Mounting Holes to Mount the Mobi Dock

1. Locate a secure mounting area, such as a stud and measure for the two openings.
2. Place the unit in the appropriate location and mark the holes for mounting.
3. Remove the unit and drill two pilot holes where the markings are located.
4. Place the unit back in the marked location, and install the screws into the wall, securing the unit to the wall.

Connecting Two Interwrite Mobi Docks to Charge Simultaneously

You can use a double-headed charger to connect two Mobi Docks, allowing you to charge **up to six** Mobis or Mobi Learners at the same time with the same charger.

1. Take one end of the adapter and connect it as you would with a single connection within the Mobi Dock.
2. Repeat for the second unit.
3. Install the units next to each other, and near the same outlet.
4. Place the Mobis and Mobi Learners into the units to charge, as you would a single unit.





Declaration of Conformity

The "CE" mark on these devices indicates compliance under the EMC 2004/108/EC Directive.
Declaration of conformity according to ISO/IEC Guide 22 and EN 45014

Manufacturer's Name: eInstruction Corp
Manufacturer's Address: 308 N Carroll Blvd Denton, TX 76201 U.S.A.

declares, that these products

Product Name: MOBI DOCK
Product Options: All
conform to the following product specifications:

RoHS: "-R" labelled products conform to DIRECTIVE 2002/95/EC.
These products are RoHS-compliant.

European Union WEEE Directive

Further information about the responsible end-of-life management of this and other eInstruction products is available on our Web site at www.einstruction.com.

European Contact:

Centre Education Europe
26/36 rue Alfred Nobel
93600 Aulnay Sous Bois
France

TEL: +33 1.58.31.10.60

FAX: +33 1.58.31.10.69

www.interwritelearning.fr



Copyright© 2009 eInstruction
Interwrite and Workspace are trademarks of eInstruction, Inc.

All other products and company names are the trademarks
or registered trademarks of their respective owners.

The information contained in this document is subject to change without notice. eInstruction assumes no responsibility for technical, or editorial errors, or omissions that may appear in this document, or for the use of this material. Nor does eInstruction make any commitment to update the information contained in this document. This document contains proprietary information which is protected by copyright. All rights reserved. No part of this document can be photocopied or reproduced in any form without the prior, written consent of eInstruction

